
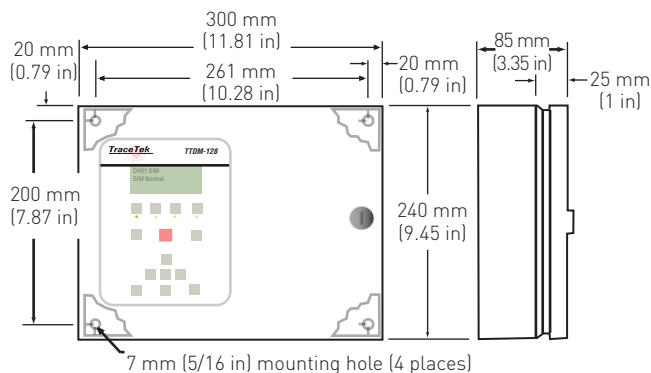


TRACETEK TTDM-128

LEAK DETECTION MASTER MODULE

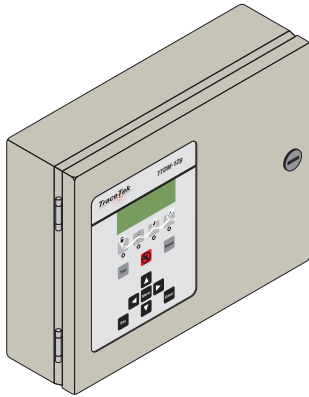

PRODUCT OVERVIEW

Easy setup and simple operation

The TTDM-128 module directly monitors up to 1500 m (5000 ft) of leak detection cable and a network of up to 127 remote TraceTek modules. The remote modules may be a combination of sensor interface modules (TTSIM), relay modules (TT-NRM) or additional TTDM-128 modules. With its networking capability, the TTDM-128 provides tremendous flexibility in terms of system layout options and monitoring capability.


When liquid is detected on any of the sensors, the TTDM-128 sounds an alarm, closes relay contacts, turns on a front panel LED and displays the circuit identification and location of the leak on the alphanumeric display. The leak detection event is logged to a non-volatile event history file. All status and event information is made available via the front panel keyboard or RS232/RS485 modbus digital communication to a host computer, PLC or plant/building automation system.

Each sensor circuit detects, locates and tracks leaks independently from any other circuits connected to the TTDM-128. There is no loss of sensitivity and no re-mapping required after an initial leak is detected. A simple map showing where the sensors are installed is the only field calibration requirement.

Design features

- Multiple event tracking capability for up to 127 independent sensor circuits.
- Summary relay contacts, LED status lights, LCD information display at the TTDM-128 panel.
- Standard external interface modes include: dry contacts, and RS232/RS485 modbus communication. A 4-20 mA analog output option is available.
- Event history accessible from the front panel or via serial port to identify type of event, time, location, and other parameters for all sensor events or user adjustments and interventions.
- Layered password protection for setup changes.
- Adjustable sensitivity and selectable measurement units.
- Universal power supply for 110/220 Vac 50/60 Hz (24 volt option available).
- Non-volatile memory for event history, setup and network configuration.
- Complete remote operation and monitoring through modbus communications or using optional TT-SUPERVISOR Windows software.

TRACETEK NETWORK ARRANGEMENT

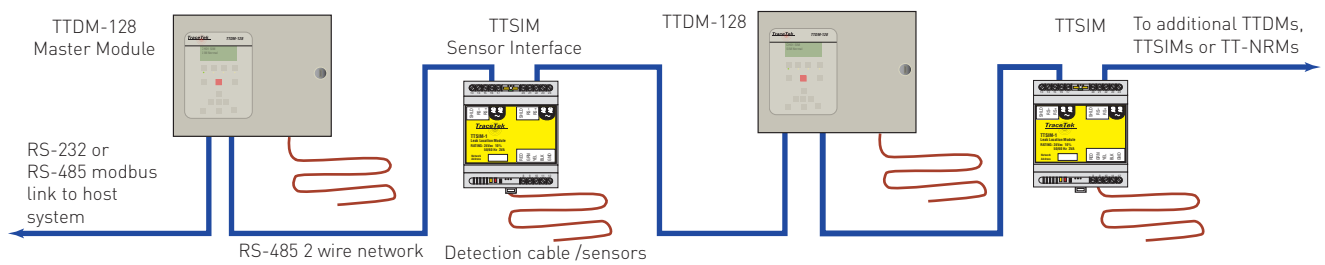


GENERAL FEATURES

- Sensor compatibility All TraceTek sensor cables and point sensors or contact closure devices
- Maximum size of network
 - Number of TTSIM modules 127 (less number of TT-NRMs installed)
 - Maximum number of TT-NRM 10
- Precision $\pm 0.1\%$ of circuit length
- Units Feet, meters or zones
- Display language English, French, German, Spanish, Japanese, Italian

ORDERING INFORMATION

	Catalog number	Part number	Description
Supply voltage	TTDM-128	P000000091	115 V + 15%, - 20% ; 230 V \pm 10% ; 50/60 Hz
	TTDM-128-24V	P000000092	24 V AC + 5%, - 35% ; 24 V DC \pm 20%
Accessories	TT-NRM	E03411-000	Network relay module
	TTSIM-1	see H56858	Network sensor interface module
	TTSIM-1A	see H57387	Network sensor interface module with relay
	TTSIM-2	see H57346	Network sensor interface module with relay
	TTDM-4/20	688799-000	4-20 mA analog output board
	TT-SUPERVISOR	591416-000	Windows based PC software

TTDM-128 LEAK DETECTION MASTER MODULE

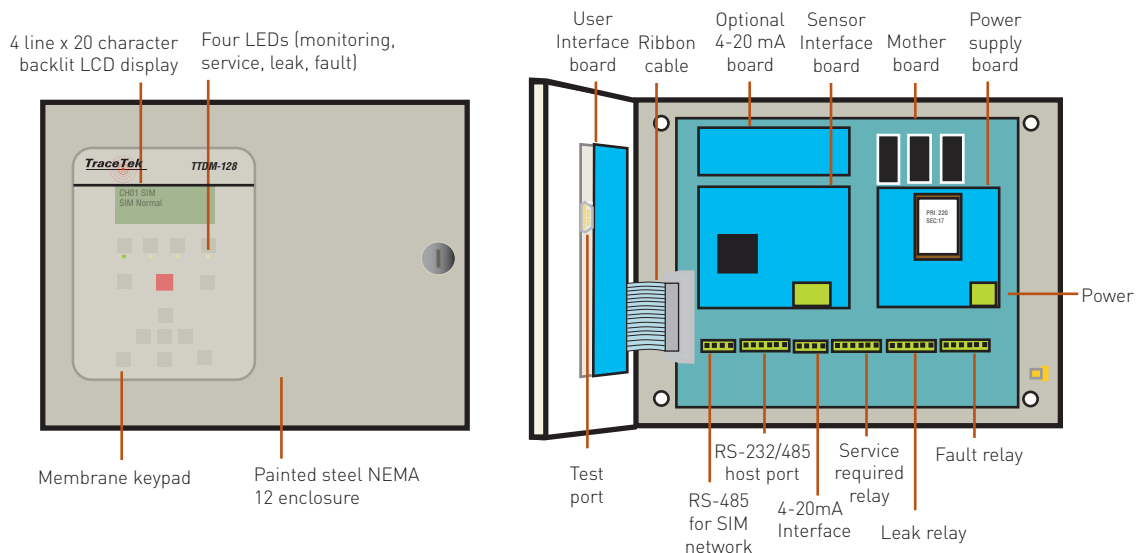

ENVIRONMENTAL

Storage temperature	-18°C to 60°C (0°F to 140°F)
Operating temperature	0°C to 50°C (32°F to 122°F)
Humidity	5% to 95% non-condensing
Max Altitude	2000 m (6,562 ft)

AUDIBLE ALARM

Piezo electric

POWER CONSUMPTION

TTDM-128	10 VA
TTDM-128-24V	9 VA

INTERFACES

Relays

Number	3 (service required, leak, fault)
Type	DPDT
Ratings	5 A at 250 V AC / 24 V DC
TraceTek network port	RS-485 (2 wire)
External serial port (to host)	RS232 (3 or 5 wire) or RS485 (2 wire)

APPROVALS AND CERTIFICATIONS




TYPE NM

General Signaling Equipment
76LJ


EUR • USA • JPN



The TTDM-128 unit is approved for use in ordinary areas. The module must be located in an ordinary area, but may monitor intrinsically safe TraceTek sensors located in hazardous locations, as shown below.

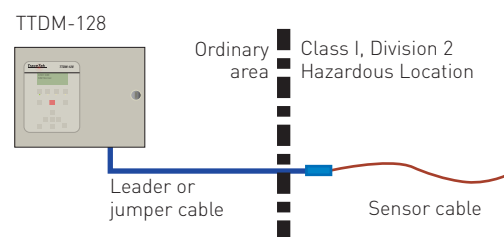

TraceTek sensors in Class I, Division 2, Groups A, B, C, D Hazardous Locations (Zone 2 in Europe).

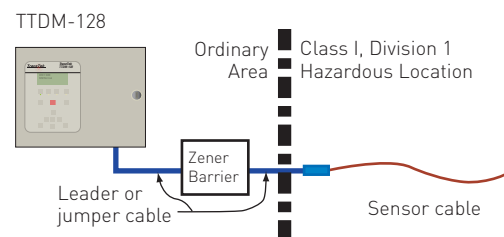

If protected by an agency approved zener barrier, TraceTek sensors in Class I, Division 1, Groups A, B, C, D Hazardous Locations (Zones 0 and 1 in Europe). Contact Pentair Thermal Management to select proper zener barrier.

The TTDM-128 enclosure is Type 12 (IP 54).



WWW.PENTAIRTHERMAL.COM

NORTH AMERICA

Tel: +1.800.545.6258
Fax: +1.800.527.5703
Tel: +1.650.216.1526
Fax: +1.650.474.7215
thermal.info@pentair.com

EUROPE, MIDDLE EAST, AFRICA

Tel: +32.16.213.511
Fax: +32.16.213.603
thermal.info@pentair.com

ASIA PACIFIC

Tel: +86.21.2412.1688
Fax: +86.21.5426.2917
cn.thermal.info@pentair.com

LATIN AMERICA

Tel: +713.868.4800
Fax: +713.868.2333
thermal.info@pentair.com

Pentair and TraceTek are owned by Pentair or its global affiliates. All other trademarks are the property of their respective owners. Pentair reserves the right to change specifications without prior notice.

© 2003–2013 Pentair.